



J169 Telephone User Guide

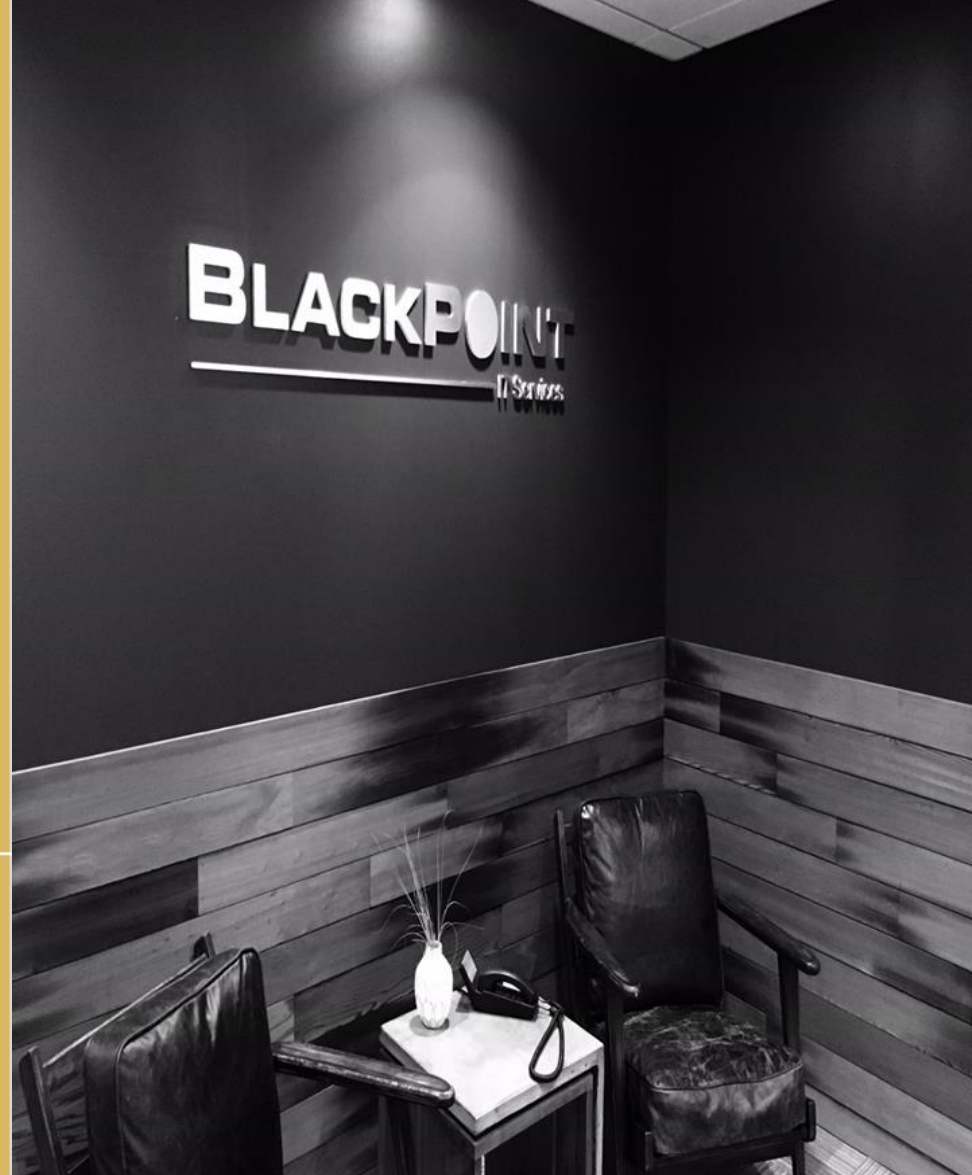

J169 Telephone User Guide

Button Layout

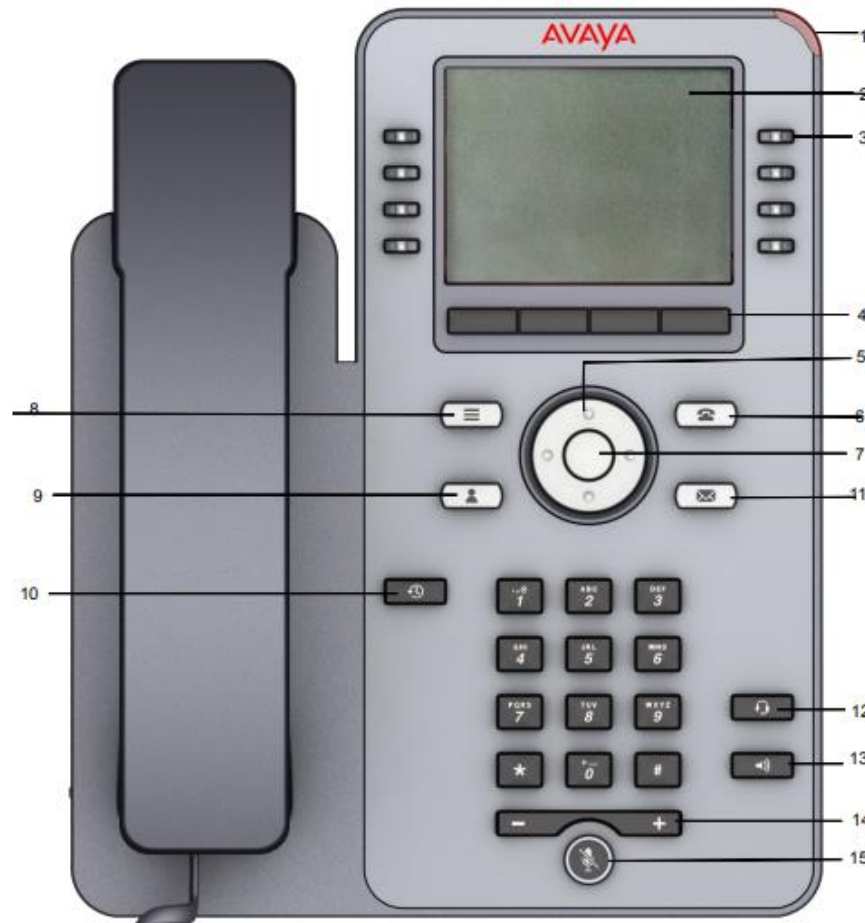

J169 Telephone User Guide

No.	Name	Description
1	Beacon LED	Displays a red light for the following visual alerts: <ul style="list-style-type: none">• Incoming call• Voice mail and messages
2	Phone display	Displays two areas: <ol style="list-style-type: none">1. Top Bar: It is always visible, and displays communication status, time and date, and device status.2. Application area displays the following:<ul style="list-style-type: none">• Application header: It displays the context specific application title, and one or more subtitles. The header is always empty on the Phone screen.• Application content area: It displays menus, lists, pop-up windows, images, or other application content.• Softkey labels area: It displays labels with information about the state of the Soft Keys button.
3	Line Keys	Used to select the corresponding rows. Each line key has a LED that displays the following visual alerts: <ul style="list-style-type: none">• Red light: Disabled features.• Green light: Incoming call and enabled features.• Red and Green light: Phone is off-hook.
4	Soft Keys	Used to select the corresponding label of context-specific actions. With the Help soft key, you can view a short description of the features available on your phone. The administrator must activate the Help feature.

J169 Telephone User Guide

5, 7	Navigation cluster	Used to navigate on the phone screen. <ul style="list-style-type: none">• Up and Down arrow keys: To scroll up and down.• Right and Left arrow keys: To move cursor in the text input field, and to toggle values in the selection fields.• OK button: To select the action assigned to the first soft key.
11	Voicemail	Used to dial the configured voice mail number to receive a voice message.
12	Headset	Used to toggle your call from the speaker to headset.
13	Speaker	Used to turn on the speaker.
14	Volume	Used to adjust volume of a handset, speaker, or ringtone. <ul style="list-style-type: none">• (+) : To increases the volume.• (-): To decrease the volume.
15	Mute Button	Used to mute and unmute the outgoing audio.
6	Phone key	Displays the phone screen.
8	Main Menu	Displays a list of options, such as Features, Applications, Settings, and Network Information.
9	Contacts	Displays the entries in your contact list.
10	Recents	Displays all call history list.

J169 Telephone User Guide

Making Calls

If you are not already on a call, just dial the number. The first available appearance button is used for the call. Alternatively, press another appearance button to hold your current call and to make a separate call.

Set a Callback

If your call to an internal user is not answered, or if the status of the user is set to Do Not Disturb, you can press Callback and end the call attempt. When the user ends their current or next call, or disables their DND status, the system calls you. When you answer, the system automatically makes another call attempt to the internal user.

Calling a Person from the Contacts List

You can use any directory contact to make a call. You can also use the directory in any function where **Dir** is displayed.

1. Press the **CONTACTS** key. The directory menu is displayed.
2. Use the left/right cursor keys to select the type of directory entries you want to display; **All**, **Personal** (your own personal directory contacts), **External**, **Users**, and **Groups**.
3. Use the up/down cursor keys to scroll through the list. Alternatively, you can use the number keypad to enter the name for which you want to display matching entries. If you dial a name, press **Clear** to return to the full list.
4. To view more details of the highlighted name, press **Details**. To return to the directory, press **List**.
5. When the required entry is highlighted, press the **Call** button

J169 Telephone User Guide

Calling from Your Call Log

You can use your call history to make calls:

1. Press the **CALL LOG** button. Use the left/right cursor keys to select which calls are shown: **All**, **Outgoing**, **Incoming** or **Missed**.
2. Use the up/down cursor keys to scroll through the records.
3. Press **Call** to call the number displayed in the call record

Redialing a Previous Number

1. Press **Redial**. Use the up/down cursor keys to scroll through your most recent outgoing calls.
2. Press **Call** to call the number displayed in the call record

Answering Calls

A slow flashing appearance button indicates an alerting call. This may also be accompanied by ringing and by the message lamp flashing. If you are currently not on a call:

- To quiet the ringing, press **Ignore**. The call will continue alerting visually.
- To redirect the call to your mailbox, press **To VM** if shown.
- To answer the call using the handset, lift the handset.
- To answer the call handsfree, press the **SPEAKER** key.
- To answer the call on a headset, press the **HEADSET** key

J169 Telephone User Guide

Once you have answered the call, you can switch between different talk modes:

- To switch to using the handset, simply lift the handset.
- To switch to handsfree, press the **SPEAKER** key. If you were using the handset you can now replace it.
- To switch to headset mode, press the **HEADSET** key. If you were using the handset you can now replace it.
- Pressing the call's appearance key or any other appearance key will put the call on hold

Answering Another Call

If you are already on a call, answering a new call automatically puts the existing call on hold.

- To answer the call, press the appearance button.
- Alternatively, using the up/down cursor keys, scroll the display to highlight the waiting call and select the action you want to apply; **Answer**, **To VM**, **Ignore** or **Drop**.

Diverting a Call to Voicemail

You can transfer directly to your voicemail mailbox any call targeted at you.

1. If the call is not the currently highlighted call on the display, use the up/down cursor keys to highlight it.
2. Press **To VM** to redirect the call to your mailbox

J169 Telephone User Guide

Adjusting the Call Volume

You can adjust the volume of the incoming audio while you are on the call:

1. With the call connected, press the **-/+ VOLUME** key.
2. Use the **+** plus and **-** minus keys to adjust the volume.

Note: The volume for the device currently in use (handset, headset, or speaker) is adjusted separately

Holding a Call

1. To put your current call on hold, press the **Hold** soft key or the call's appearance button.
2. The held call will be indicated by its call appearance button with a fast-flashing green lamp. On phones with only a single call appearance button (or icon), the phone displays "On-Hold" before the call information on the call's application line.
3. While held, the caller will hear music on hold. If your system does not have music on hold available, the caller will hear double beep tones every few seconds.
4. You can scroll the display using the up and down cursor keys

J169 Telephone User Guide

Muting a Call

Muting a call stops the far end from hearing you although you can still hear the far end.

1. To activate mute, press the **MUTE** key. The button will be lit while mute is active.
2. To switch mute off, press the **MUTE** key again

Ending a Call

- The **Drop** button can be used to end the currently highlighted call.
- If the call is on the phone's speaker, the **SPEAKER** key is lit. Pressing the key again will end the call.
- If the call is on the phone's headset, the **HEADSET** key is lit. Pressing the key again will end the call.
- If the call is on the phone's handset, replacing the handset will end the call

Ending a Call

If you have a connected call and have held alternate calls, pressing **Conf** will start a conference with those held calls and the connected call.

Otherwise, to start a conference or to add another party to a conference:

1. Press **Conf**. Your current call is put on hold.
2. Dial the party that you want to add to the conference.
3. If they answer and want to join the call, press **Conf** again.
4. If they do not want to join or do not answer, press **Drop** and then press the appearance key of the held call.

J169 Telephone User Guide

Starting a Conference

If you have a connected call and have held alternate calls, pressing **Conf** will start a conference with those held calls and the connected call.

Otherwise, to start a conference or to add another party to a conference:

1. Press **Conf**. Your current call is put on hold.
2. Dial the party that you want to add to the conference.
3. If they answer and want to join the call, press **Conf** again.
4. If they do not want to join or do not answer, press **Drop** and then press the appearance key of the held call

Dropping/Muting Parties

While in a conference, press the **Details** key. Scroll through the list of callers in the conference and:

- To drop a caller from the conference, highlight them and press **Drop**.
- To mute a caller, highlight them and press **Mute**. Repeat this to unmute them.
- To return to the call display, press **Back**

Transferring Calls

You can transfer calls even if no call appearance buttons are available.

1. Press **Transfer**. The current call is put on hold.
 2. Dial the number for the transfer. Alternatively, press **Dir** to select a destination from the directory, or press **Redial** if applicable.
- To complete a supervised transfer, press **Complete** after the call has been answered.
 - To complete an unsupervised transfer, press **Complete** while the call is still ringing.
 - If the transfer destination does not answer or does not want to accept the call, press **Cancel**

J169 Telephone User Guide

Transferring Calls to Voicemail

You can use the **Message** key to transfer a call to another user's or group's voicemail mailbox.

1. With a call connected, press the **Message** key. You can continue talking.
2. Dial the extension number of the user or group and press **Select**

Do Not Disturb

When you select 'Do Not Disturb', your calls are redirected to voicemail if available or otherwise hear busy tone. Calls to any group of which you are a member are not presented to you. You can still use the phone to make outgoing calls. When you go off-hook you will hear broken dial tone.

1. Press **Features**. Use the up/down cursor keys to highlight **Call Settings**. Press **Select**.
2. Select **Do Not Disturb**.
3. Press **Change** to change the setting.
4. Press **Save** to save the setting

Forward Unconditional

You can change your forward unconditional settings using the Features menu.

1. Press **Features**. Use the up/down cursor keys to highlight **Forward**. Press **Select**.
2. Use the up/down cursor keys to highlight **Forward Unconditional**. Press **Select**.
 - **To switch on/off:** Highlight **Fwd Unconditional**. Press **On** or **Off**. If no destination is currently set, the display jumps to the destination field.
 - **To select which calls:** Highlight **Call Type**. Press **Change** and when the required option is displayed press **Save**. Options are **External Only**, **External and Group**, **Non Group Calls** and **All Calls**.
 - **To set the destination:** Highlight **Destination**. Press **Edit** and enter the number required or press **To VM** to forward to voicemail.

J169 Telephone User Guide

Follow Me

You can redirect your calls temporarily to another extension.

1. Press **Features**. Use the up/down cursor keys to highlight **Forward**. Press **Select**.
2. Use the up/down cursor keys to highlight **Follow Me To**. Press **Select**.
3. Dial the number of another user or press **Dir** to select from the directory. Press **Save**

Adding a New Contact

You can add up to 100 personal directory contacts. This number is limited by the capacity of the telephone system directory. If capacity is met, you will not be able to add new contacts.

1. Press the **CONTACTS** key. Use the left/right cursor keys to select your *Personal* directory.
2. To add a contact, press **New**. To edit a contact, highlight it and press **Edit**.
 - Use the up/down cursor keys to switch between number and name entry.
 - When the name and number have been entered as required, press **Save**

Add a Contact from Your Call History

You can add a name and number shown in your call history to your personal contacts.

1. Press the **CALL LOG** button. Use the left/right cursor keys to select which calls are shown: *All*, *Outgoing*, *Incoming* or *Missed*.
2. Use the up/down cursor keys to scroll through the records.
4. Press **More** and then press **+Contact**.
5. Use the up/down cursor keys to switch between the name and number details for the new contact.
6. When the name and number are set as required, press **Save**

J169 Telephone User Guide

Checking Messages

1. Press the **MESSAGE** button. Enter your voicemail password if requested and press **Done**.
2. The numbers shown next to **Listen** indicate the number of new, old and saved messages.
3. Highlight **Listen** and press **Select**.
4. Use the up/down cursor keys to highlight which messages (**New**, **Old** or **Saved**) that you want to listen to and press **Select**. The details of the first message of that type are displayed.
5. You can use the up/down cursor keys to scroll through the messages.
6. Use the soft keys to control the playback actions for the current message.

By default, messages are automatically deleted a set time after being played. The delay depends on the particular voicemail server (24 hours for embedded voicemail, 30 days for Voicemail Pro).

Voicemail On/Off

You can control whether voicemail is used for your unanswered calls. This does not switch off your mailbox; you can still

play existing messages and use other functions.

1. Press the **MESSAGE** button. Enter your voicemail password if requested and press **Done**.
2. Use the up/down cursor keys to highlight **Voicemail**.
3. Press **Change** to switch between **On** or **Off**.
4. Press **Save** to save the change